


Instructions for use


For ultimate results take a warm bath or shower and use the loofa, enclosed, in small circles to remove dead skin and open pores. Doing this before you use your Emjoi® Gently Gold Caress will help to make the hair removal process more comfortable




Remove all contents from package
1. Gently Gold Caress
2. Adapter 3. Loofa
4. Cleaning Brush 5. Pouch

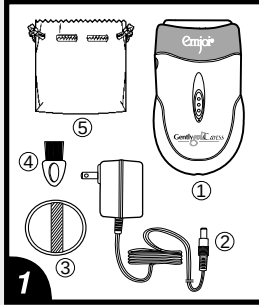

Insert plug into base of unit.

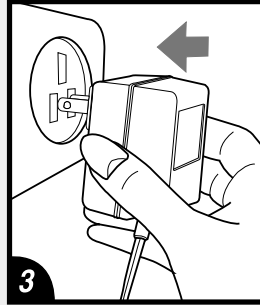


Place the adapter into socket.

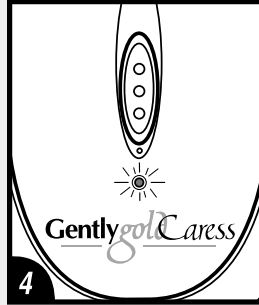


The red indicator lights when it is plugged into an electric outlet.




Remove the plastic, protective cover.

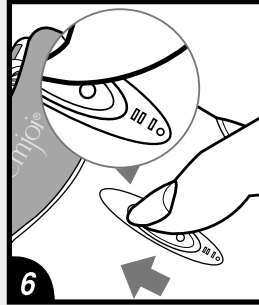


The unit has 2 speeds:
○ Low speed for fine hair.
○ High speed for coarse hair.

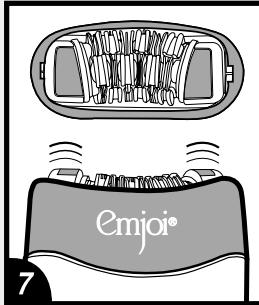


The vibrating agents on the side help to eliminate discomfort.

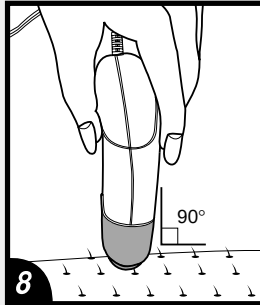

Hold the unit in your palm, at a 90° angle, so the Emjoi® logo is facing away from you. You do not need to apply pressure, just touch the surface of the skin.

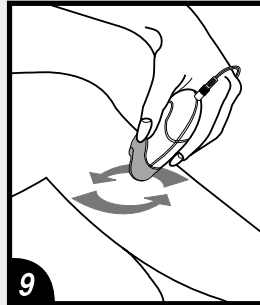

Use short, quick, brush like or sweeping motions in the direction of hair growth.

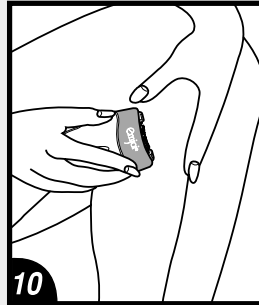

Make sure to hold the skin surrounding the area you are removing hair from taut. Keep your leg extended when removing hair from behind the knees.




May be used for the bikini area (hold the skin taut with one hand).




Can be used to remove individual hairs from the upper lip and chin area.




May be used to remove hair from underarms (extend your arm so the skin is held taut).

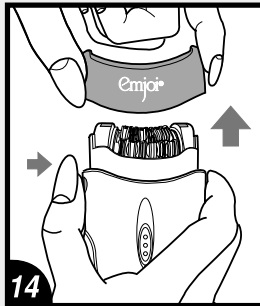

To Clean: Remove the cover of the unit by gently pressing the blue button on the side of the unit.

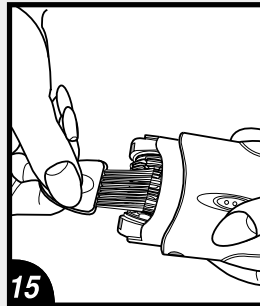

Gently brush the tweezer heads to remove any hair.

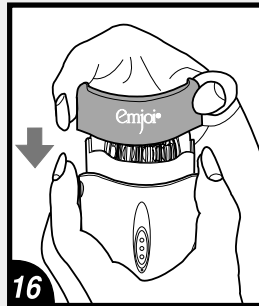

Replace the cover.

Note: This unit does not require any sanitizing

Warranty

The Emjoi® Gently Gold Caress warranty against defects in material and workmanship lasts one year from the date of purchase. During this warranty period Emjoi® (directly or through your local retailer) will take care of repair, or at their option, replacement of the defective unit without charge.

* Original invoice or receipt is needed for warranty service.

IMPORTANT: This warranty does not cover damages resulting from accidents, misuse, alterations, abuse, lack of reasonable care, or performance of services or repairs by an unauthorized service center. The manufacturers and the distributors of Emjoi® Gently Gold Caress do not assume responsibility for any damage caused by misuse or use other than that described in these instructions.

For questions and comments in the US visit us at www.emjoi.com

Model AP-9GA | US Patent No. 6,123,713
and 5,281,233 Other Patents Pending |
Made in China | © by Soft Lines International, Ltd.

Emjoi®
Gently gold Caress
The Totally Luxurious Hair Removal System
with New Pain Reduction Technology



Emjoi®
Technology That Gets Personal

Emjoi®
Technology That Gets Personal

Emjoi® Gently gold Caress

The Totally Luxurious Hair Removal System
with New Pain Reduction Technology

Before using your Emjoi® Gently Gold Caress, please read all these instructions carefully and completely.

Do not store or use your Emjoi® Gently Gold Caress where it can fall into a tub or sink of water. Do not reach for your unit if it has fallen into water – immediately unplug it.

The Emjoi® Gently Gold Caress will help you obtain and maintain silky smooth skin with its new, super-gentle and fast Pain Reduction Technology. Pain Reduction Technology was designed to help eliminate pain that is normally associated with removing hair from the root.

The Emjoi® Gently Gold Caress, incorporating over 10 years of development and know-how, takes epilation to new levels of efficiency and comfort that you can use at home or while traveling.

With its curved, ergonomic shape and 36 gold plated tweezers that fit the contours of your body, it quickly and effectively removes hair as short as 1/100 inch (0.25mm) in length, so you can use the Emjoi Gently Gold Caress the day after shaving.

The Emjoi® Gently Gold Caress can only be used after being plugged in to an electrical outlet.

Caution

Before plugging into an electrical outlet, make sure that the adapter is appropriate for the local voltage. This is extremely important when traveling overseas.



Instructions for use:

For best results: Take a warm bath or shower, to open up your pores, and use the loofa sponge, enclosed, in small circles to exfoliate and remove dead skin from the area you wish to remove hair. Use the loofa sponge wet with any bath/shower gel or bar soap. Doing this before you use your Emjoi® Gently Gold Caress will cleanse and make your skin pliable, so removing hair will be less uncomfortable.

1. Use your Emjoi® Gently Gold Caress in a location that has a comfortable temperature to avoid perspiration.
2. Make sure that the areas you wish to remove hair from are clean, dry and free from moisturizing cream or oil.
3. Insert the adapter plug into the bottom of the unit.
4. Plug your adapter into an electrical outlet.
5. Remove the protective cap, by gently pulling, from your Emjoi® Gently Gold Caress.
6. Turn your unit to the desired speed, low is recommended for fine hair and high is recommended for coarse hair.
7. Position your Emjoi® Gently Gold Caress so that the gold discs are upright, the Emjoi logo should be facing away from you.
8. To minimize discomfort, hold the skin taut surrounding the area you are removing hair from.
9. Gently glide the Emjoi® Gently Gold Caress in short, quick, brush like or sweeping strokes in the direction of hair growth.
Note: For your protection, your Emjoi® Gently Gold Caress may slow down, or stop operating completely if it is pressed too hard against the skin.
10. Before removing hair from the bikini line and underarms it is important to use the loofa sponge in a warm shower or bath to remove dead skin and prevent ingrown hairs. If it has been an extended amount of time since you have removed hair from your bikini line and underarms, trim the hair with a scissor or trimmer. Make sure to hold your skin taut with one hand while removing hair.
11. The Emjoi® Gently Gold Caress is only intended to remove single hairs from the upper lip and chin. Hold area taut and use a small brushing motion. Do not use like an electric shaver on your entire face!
12. Repeat within each area until all unwanted hair is removed. The time required to remove unwanted hair depends on the users hair type. After several months of continuous use, the hair may begin to grow in sparser and finer.
13. After each use clean your Emjoi® Gently Gold Caress.

Cleaning:

Regular cleaning and good maintenance ensures optimum results and will extend the lifetime of your Emjoi® Gently Gold Caress.

1. Before cleaning, make sure to turn off your unit and unplug it from the electrical outlet.
 2. Remove the disc cover, where it says Emjoi, by pressing the release button, on the side, and pulling the cover up.
 3. Using the brush, enclosed, remove hair on all sides of the discs.
 4. Replace the disc cover by gently pressing until you hear it click into place.
 5. Put the protective cap on to safeguard the tweezers.
- Sanitizing:

To sanitize the gold plated tweezers use-rubbing alcohol on the tip of the tweezers with a cotton swab that has been squeezed dry.

Note: Make sure that the cotton swab is not soaked with alcohol.

Important

- Use the Emjoi® Gently Gold Caress only for purposes described in this instruction book.
- Only use your Emjoi® Gently Gold Caress with the adapter Emjoi supplied with the unit. For questions regarding your adapter in the US contact 1-888-99EMjOI, M-F, 9-5 EST.
- Do not wrap the cord of your adapter around the unit.
- Always unplug your Emjoi® Gently Gold Caress when it is not in use and before cleaning it.
- Keep the protective cap on your unit when it is not in use.
- Warning – To reduce the risk of burns, fires or electric shock, never leave your Emjoi® Gently Gold Caress unattended when plugged in.
- Do not use your Emjoi® Gently Gold Caress while bathing or in the shower.
- This appliance is not to be used on, by or near children.
- Do not use the Emjoi® Gently Gold Caress if you have varicose veins, blemishes or when your skin is irritated. Consult with your health care provider prior to use.
- If you have a pacemaker consult with your physician prior to use.
- Using an epilator may cause redness or irritation of the skin. This is a normal reaction that will quickly disappear. If any irritation remains for more than 3 days, consult your physician.
- Regular skin massaging with a massaging glove or loofa sponge, enclosed, can prevent ingrown hairs.
- To prevent accidents - when your Emjoi® Gently Gold Caress is in use, keep it away from the hair on your scalp, your eyebrows, eyelashes as well as clothes, brushes, wires, cords, shoelaces etc.

Frequently asked questions:

Q: Does the Emjoi® Gently Gold Caress hurt?
A: The first time you use the Emjoi® Gently Gold Caress you might feel a prickling sensation. This feeling is due to the fact that you are removing hair from the root. After several uses, the tweezing becomes more comfortable even for those with sensitive skin.

Q: How should I hold the Emjoi® Gently Gold Caress?
A: To minimize discomfort, hold the skin taut surrounding the area you are removing hair from. Gently glide, you do not need to apply pressure, the Emjoi® Gently Gold Caress in short, quick, brush like or sweeping strokes in the direction of hair growth.
Note: For your protection, your Emjoi® Gently Gold Caress may slow down, or stop operating completely if it is pressed too hard against the skin.

Q: Can I use the Emjoi® Gently Gold Caress on my upper lip?
A: Yes. The Emjoi® Gently Gold Caress is perfect for removing individual hairs from the upper lip. Important: Hold your upper lip taut and use short brushing strokes to remove individual hairs from your upper lip.

Q: Can I use the Emjoi® Gently Gold Caress anywhere on my face?
A: No. The Emjoi® Gently Gold Caress is only intended to remove individual hairs from the upper lip and chin area. When removing hair from your upper lip and chin, hold your skin taut and use short brushing motions. Do not use Emjoi® Gently Gold Caress like you would an electric shaver.

Q: Can I use the Emjoi® Gently Gold Caress on my bikini line and underarms?
A: Yes. Before removing hair from the bikini line or underarms it is important to use the loofa sponge, enclosed, in a warm shower or bath to remove dead skin and prevent ingrown hairs. Since these areas can be sensitive, it is important to hold the skin taut.

Q: Will my hair grow back as fast as it does when I shave?
A: No. With shaving you are cutting the hair at the surface, so hair grows back quickly. When you use the Emjoi® Gently Gold Caress it removes hair from the root so it takes longer, up to 4-6 weeks, depending on hair type to grow back. With repeated use your hair may grow back lighter and thinner.

Q: What if my skin becomes red after using the Emjoi® Gently Gold Caress?
A: Whenever you remove hair from the root your skin may become red or irritated. To sooth irritation you can use lotion with aloe vera, antibiotic ointment or Emjoi® After Epilation Cream, visit www.emjoi.com, scientifically designed to speed up the healing process and sooth irritation that is sometimes associated with epilation.

Q: What can I do for ingrown hairs?
A: We recommend using a wet loofa sponge, enclosed, or an exfoliation cream in the shower or bath to soften the skin and any ingrown hairs, enabling the Emjoi® Gently Gold Caress to remove the hair from the root.

Q: I have varicose veins, can I use the Emjoi® Gently Gold Caress.
A: Regarding any medical issues or questions, we strongly advise you to consult your health care physician prior to use.

Q: Why is the Emjoi® Gently Gold Caress curved?
A: Because your body is curved. The tweezing head is curved to gently and effectively glide along the contours of your body.

Q: Can I use this unit without the cord?
A: No. The Emjoi® Gently Gold Caress must be used with its adapter cord. Do not use any other cord with this unit other than the one Emjoi® supplied.

Q: Do I have to clean the Emjoi® Gently Gold Caress?
A: Yes. We recommend that you clean your unit after each use. Before cleaning make sure to unplug the unit from the electrical outlet. Remove the disc cover, where it says Emjoi®, by pressing the release button and pulling the cover up. Using the brush, enclosed, remove hair on all sides of the discs. Replace the discs cover by gently pressing until you hear it click into place.

Q: Should I let someone else use my Emjoi® Gently Gold Caress?
A: No. For sanitary reasons, the Emjoi® Gently Gold Caress is only recommended to be used by one person.

Q: How can I sanitize the tweezers?
A: To sanitize the gold plated tweezers, use-rubbing alcohol on the tip of the tweezers with a cotton swab that has been squeezed dry.
Note: Make sure that the cotton swab is not soaked with alcohol.

Q: I have a pacemaker; can I use the Emjoi® Gently Gold Caress?
A: With any medical conditions we recommend that you consult with your physician prior to use.

